

Skullcandy USER GUIDE

Grand Fuel Series


Download the Skullcandy App

Download the Skullcandy App to control your headphones. The app allows you to adjust the EQ, activate voice assistant, and more. Download the app from the App Store or Google Play.




Auto Power - On/Off

When the headphones are removed from the carrying case, they will automatically power on. When the headphones are placed back into the carrying case, they will automatically power off.

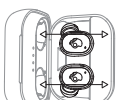


Power - On

Let the headphones power on. Press the power button (located on the right earcup) to power on the headphones. The power button is marked with a power symbol.

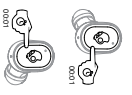


Power - Off

Let the headphones power off. Press and hold the power button (located on the right earcup) for 5 seconds to power off the headphones. The power button is marked with a power symbol.

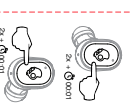

Pairing Mode

Put the headphones into pairing mode. Press and hold the power button (located on the right earcup) and the multifunction button (located on the left earcup) for 5 seconds. The headphones will enter pairing mode and the LED indicator will flash red and blue.

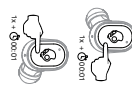

Put New Device

Put the headphones into pairing mode. Press and hold the power button (located on the right earcup) and the multifunction button (located on the left earcup) for 5 seconds. The headphones will enter pairing mode and the LED indicator will flash red and blue.



Put Old Device

Put the headphones into pairing mode. Press and hold the power button (located on the right earcup) and the multifunction button (located on the left earcup) for 5 seconds. The headphones will enter pairing mode and the LED indicator will flash red and blue.




Volume Up

Volume Up. Press the multifunction button (located on the left earcup) to increase the volume. The multifunction button is marked with a volume up symbol.




Volume Down

Volume Down. Press the multifunction button (located on the left earcup) to decrease the volume. The multifunction button is marked with a volume down symbol.




Share Audio

Share Audio. Press and hold the multifunction button (located on the left earcup) and the power button (located on the right earcup) for 5 seconds. The headphones will enter share audio mode and the LED indicator will flash red and blue.

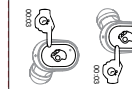


Re-Sync Earbuds

Re-Sync Earbuds. Press and hold the multifunction button (located on the left earcup) and the power button (located on the right earcup) for 5 seconds. The headphones will enter re-sync mode and the LED indicator will flash red and blue.




Find My Tile™

Find My Tile™. Press and hold the multifunction button (located on the left earcup) and the power button (located on the right earcup) for 5 seconds. The headphones will enter find my tile mode and the LED indicator will flash red and blue.

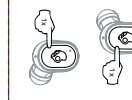


Quality Tip

Quality Tip. Press and hold the multifunction button (located on the left earcup) and the power button (located on the right earcup) for 5 seconds. The headphones will enter quality tip mode and the LED indicator will flash red and blue.



Reset Paired Device List

Reset Paired Device List. Press and hold the multifunction button (located on the left earcup) and the power button (located on the right earcup) for 5 seconds. The headphones will enter reset paired device list mode and the LED indicator will flash red and blue.

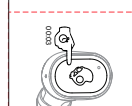


Charge Earbuds

Charge Earbuds. Place the earbuds in the charging case. The charging case will charge the earbuds. The charging case has a USB-C port and a battery level indicator.



Charge the Case

Charge the Case. Connect the charging case to a power source. The charging case will charge the earbuds. The charging case has a USB-C port and a battery level indicator.

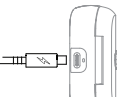

Video Control

Video Control. Press the multifunction button (located on the left earcup) to activate video control. The multifunction button is marked with a video control symbol.



FCC Compliance Statement

FCC Compliance Statement. This device complies with the FCC's Part 15.247 and 15.249 rules. This device does not cause harmful interference, and it must accept any interference that may be received, including interference from radio and television stations.

Bluetooth

Bluetooth. This device is designed to be used with Bluetooth-enabled devices. The device is not intended for use with other wireless technologies.

Warranty

Warranty. This device is covered by a 1-year global warranty. The warranty is void if the device is damaged, modified, or used in an unauthorized manner.

Skullcandy 1 YEAR GLOBAL WARRANTY

Skullcandy 1 Year Global Warranty. This warranty covers the original purchaser of the product. The warranty is void if the product is damaged, modified, or used in an unauthorized manner.

Skullcandy 1 YEAR GLOBAL WARRANTY

Skullcandy 1 Year Global Warranty. This warranty covers the original purchaser of the product. The warranty is void if the product is damaged, modified, or used in an unauthorized manner.

Skullcandy 1 YEAR GLOBAL WARRANTY

Skullcandy 1 Year Global Warranty. This warranty covers the original purchaser of the product. The warranty is void if the product is damaged, modified, or used in an unauthorized manner.

Skullcandy 1 YEAR GLOBAL WARRANTY

Skullcandy 1 Year Global Warranty. This warranty covers the original purchaser of the product. The warranty is void if the product is damaged, modified, or used in an unauthorized manner.

Skullcandy 1 YEAR GLOBAL WARRANTY

Skullcandy 1 Year Global Warranty. This warranty covers the original purchaser of the product. The warranty is void if the product is damaged, modified, or used in an unauthorized manner.

Skullcandy 1 YEAR GLOBAL WARRANTY

Skullcandy 1 Year Global Warranty. This warranty covers the original purchaser of the product. The warranty is void if the product is damaged, modified, or used in an unauthorized manner.