


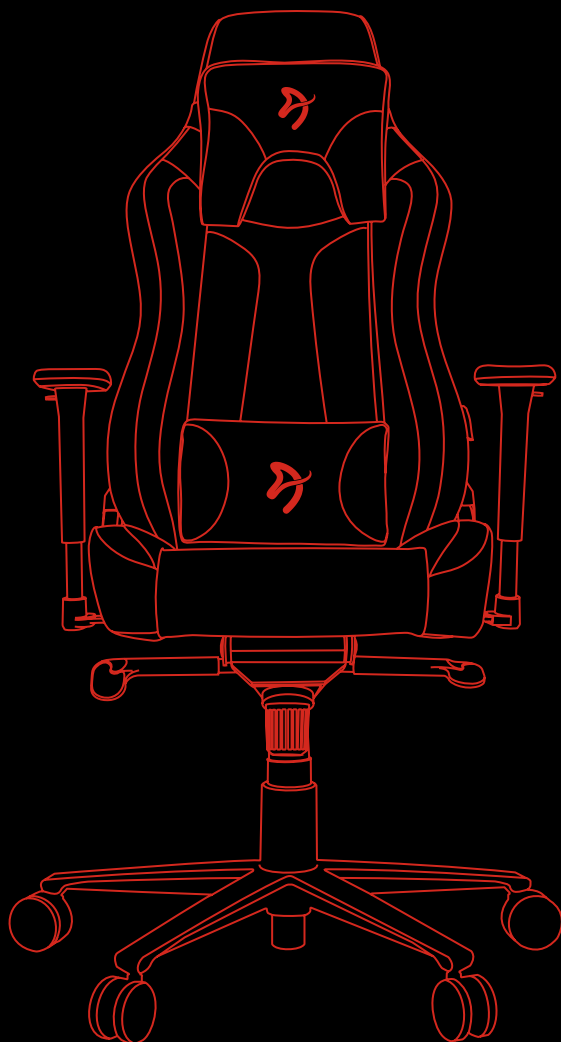
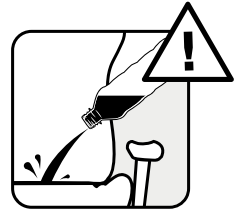
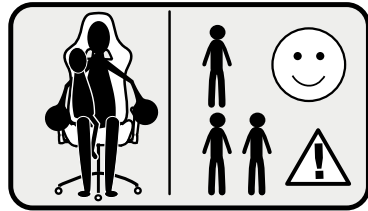
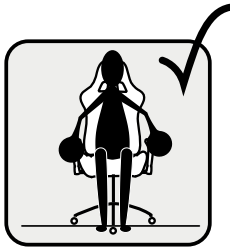
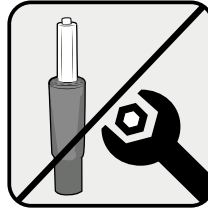
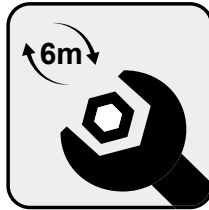


# ASSEMBLY GUIDE


## VERNAZZA & VERNAZZA SOFT FABRIC

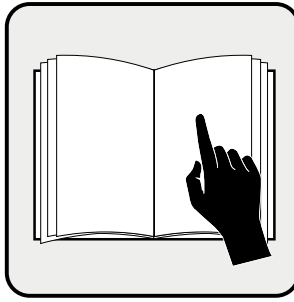

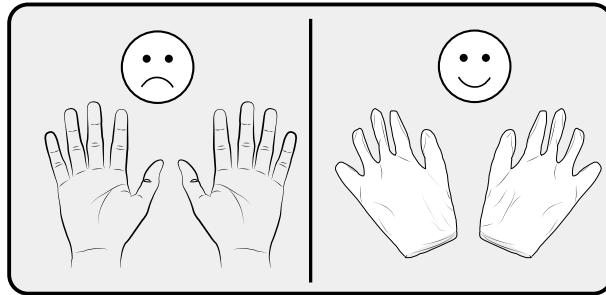

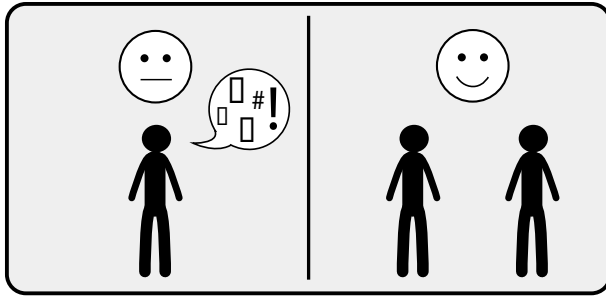

**A**



**x8**

**B**




**x8**

**C**




**x8**


1

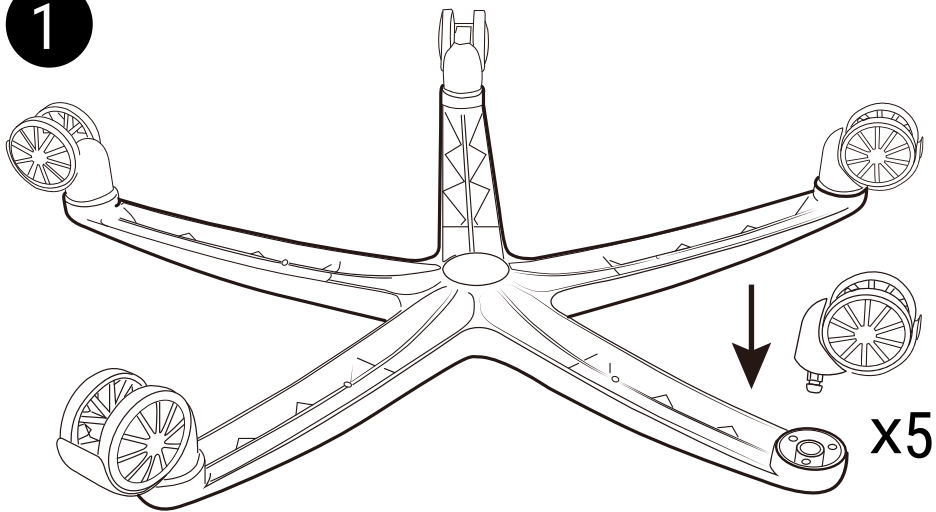


2

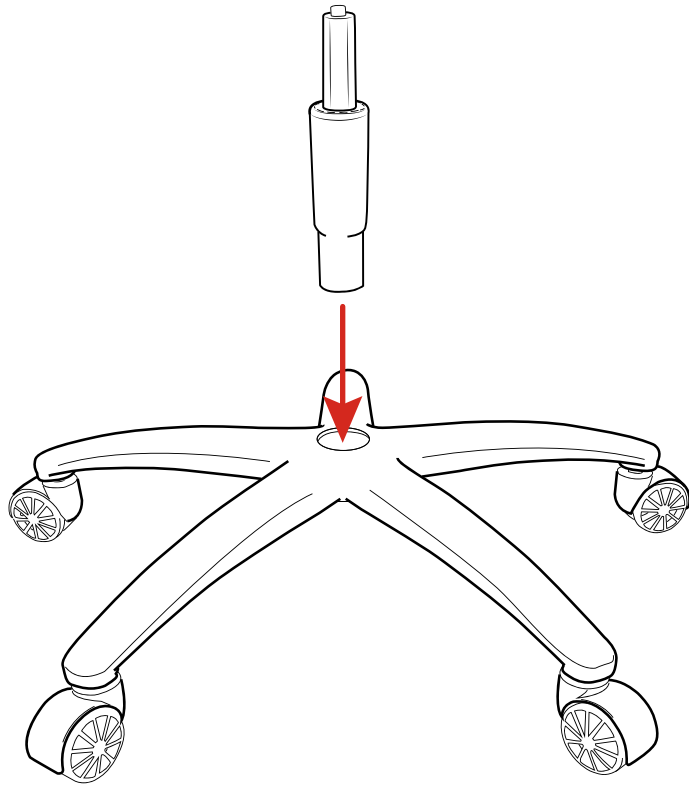


3

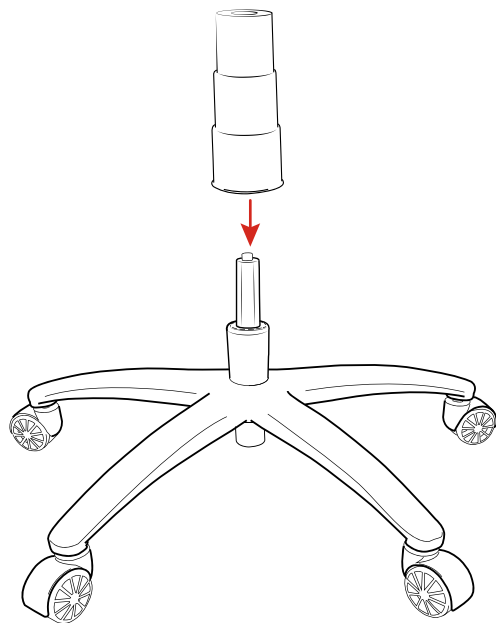


4






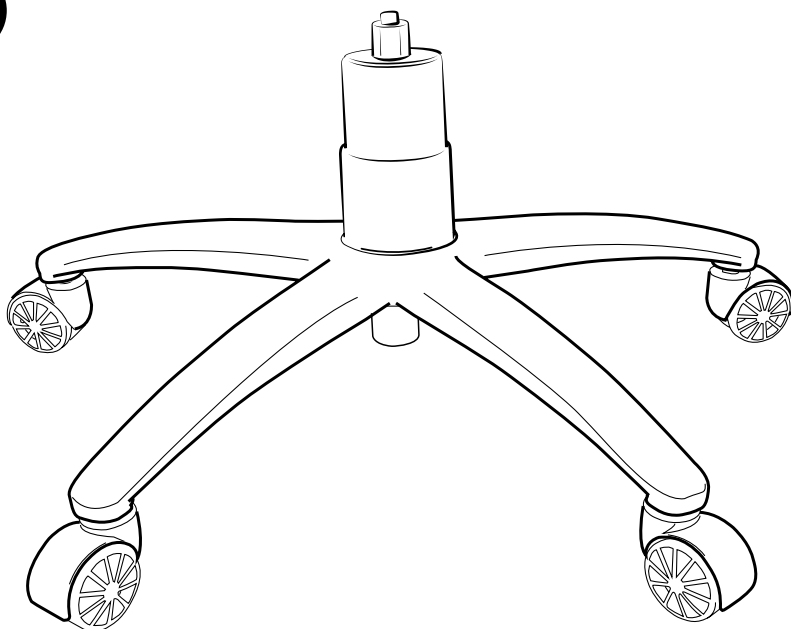


5

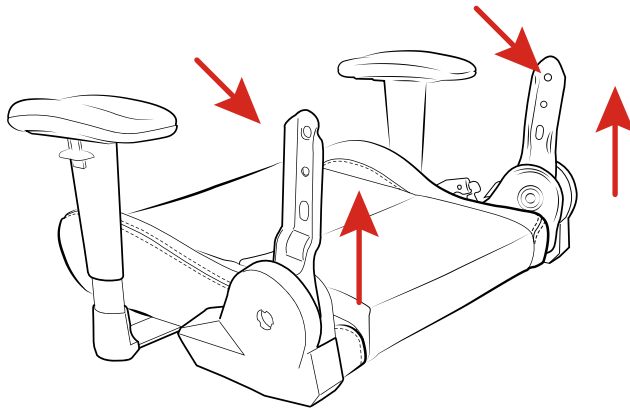


6

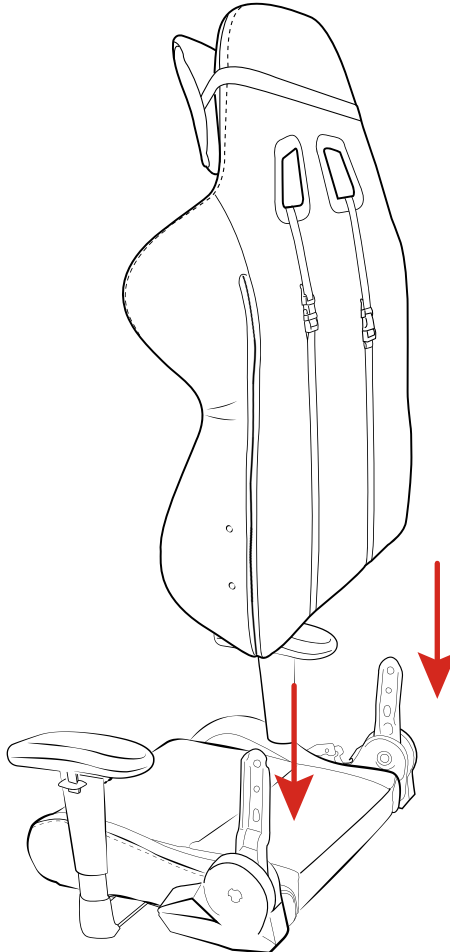


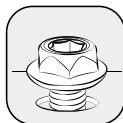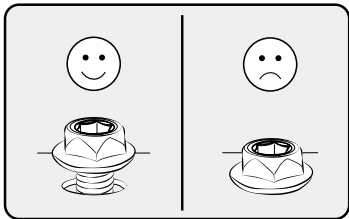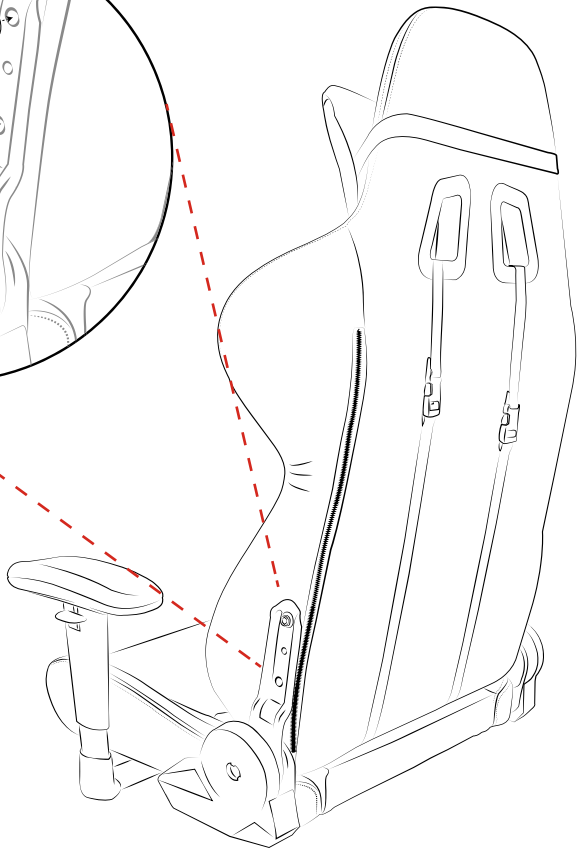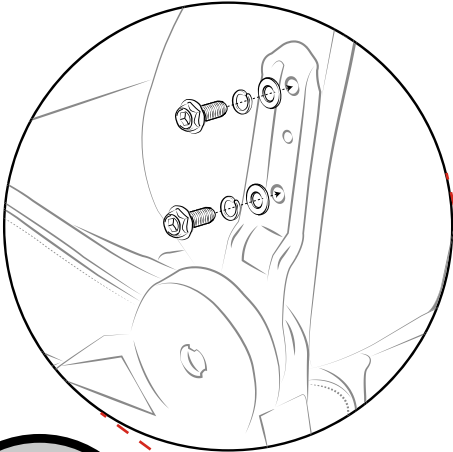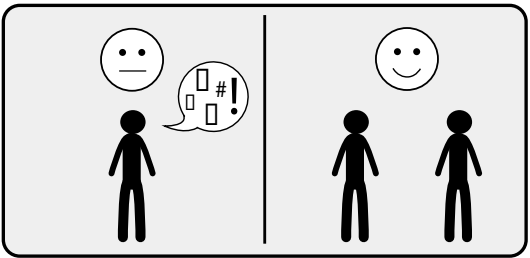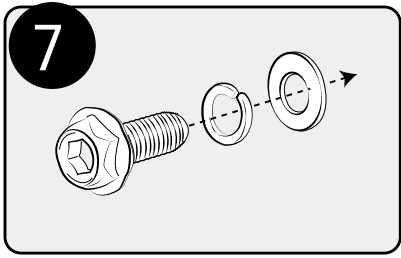

9

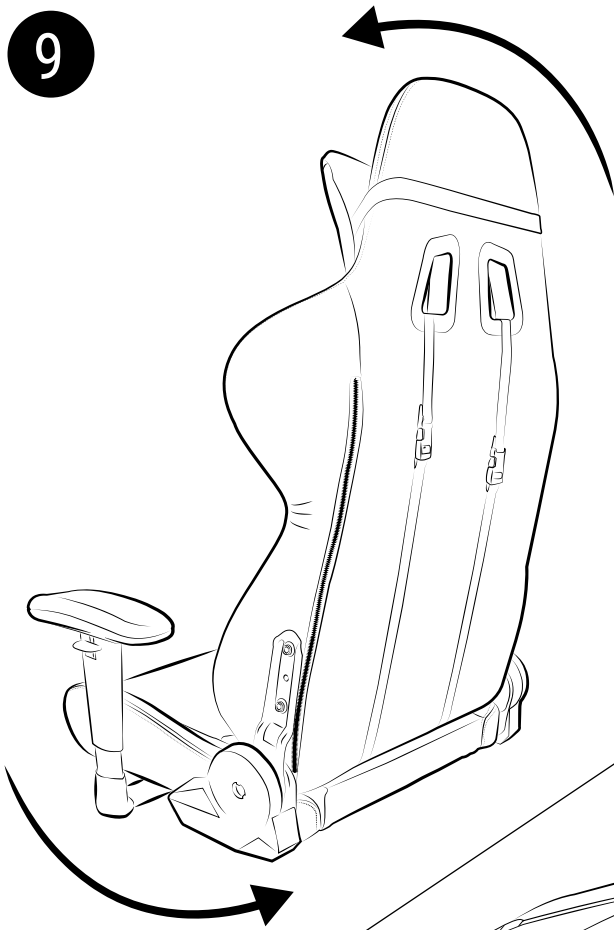

10






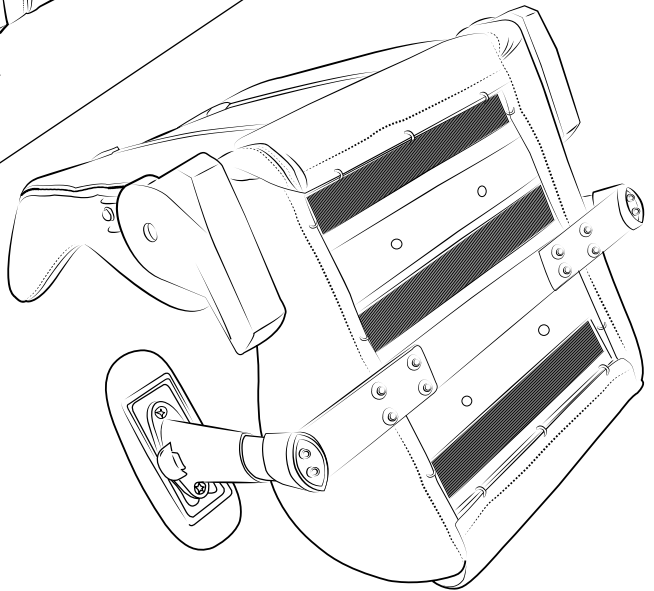






11




**ATTENTION!**

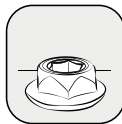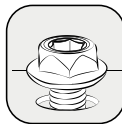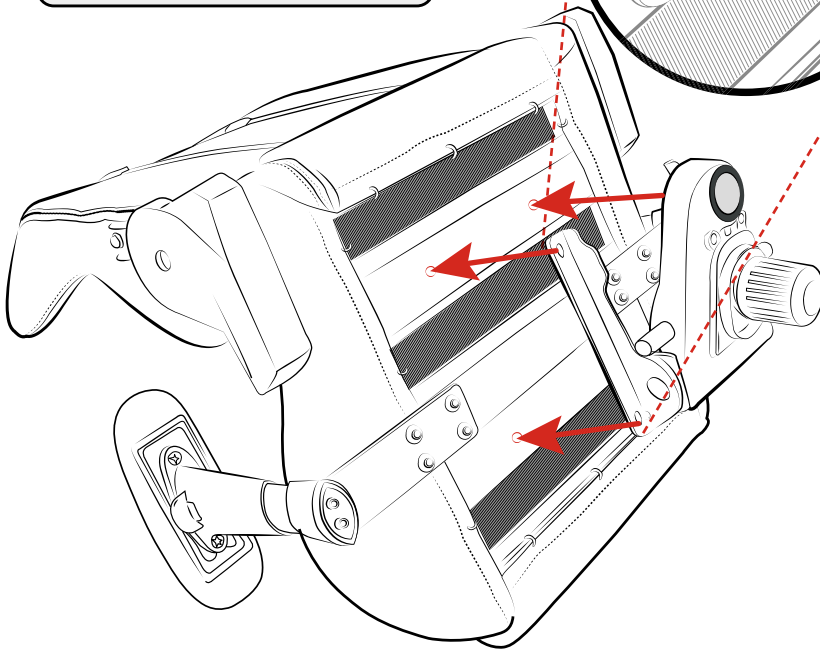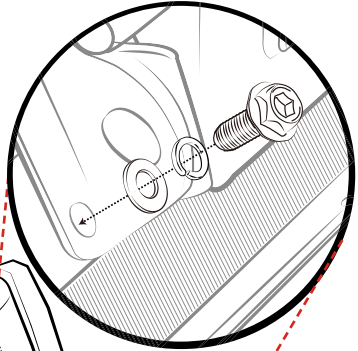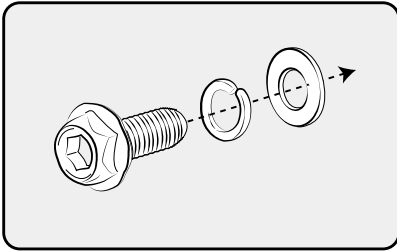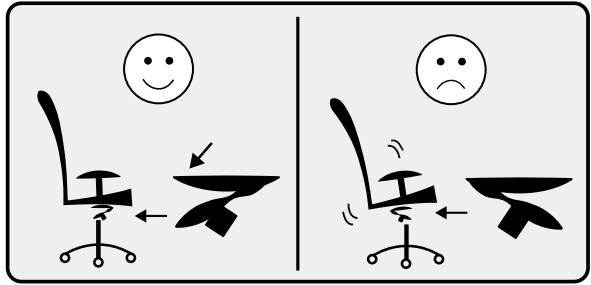

12

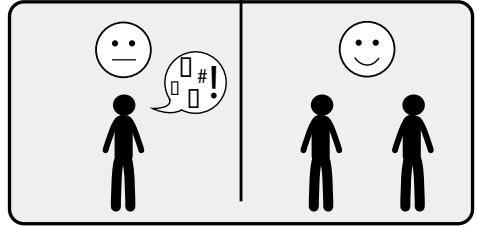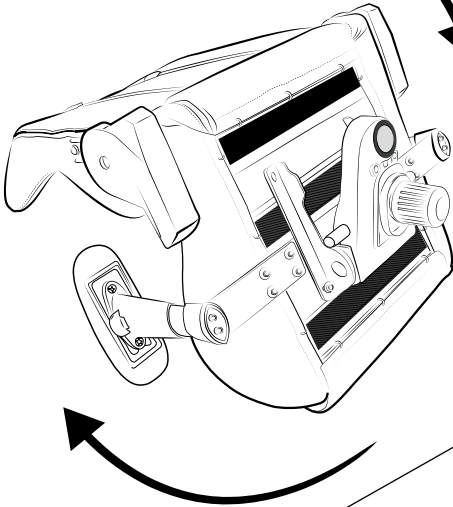

13

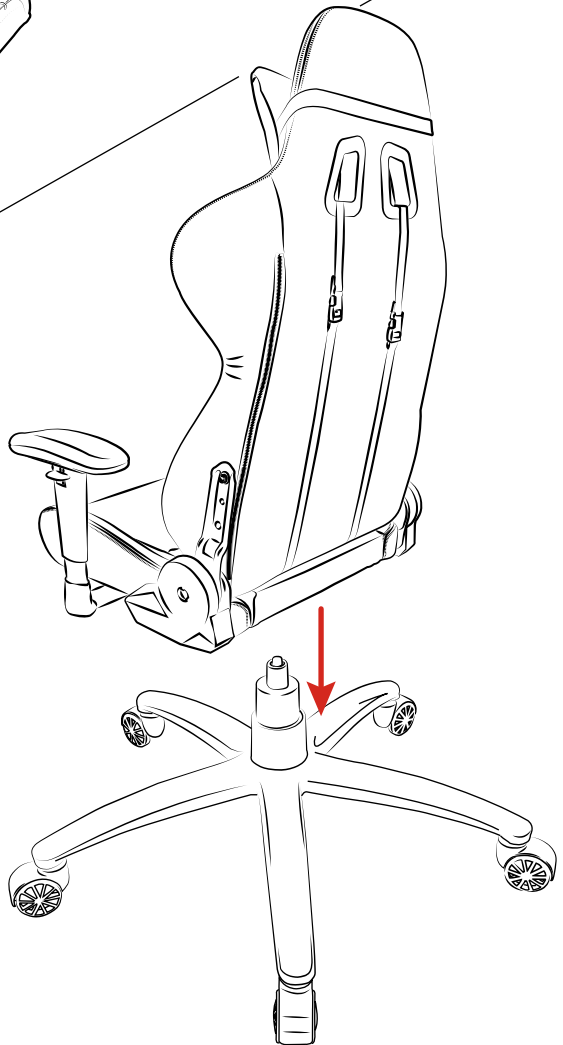

14

